

TT-10 Version F.070



Communication
 Analog inputs
 Temp inputs
 Analog outputs
 Digital inputs

Digital input connectors

DIG 1	
DIG 2	
DIG 3	Water count
DIG 4	Feed count
COM	

Temperature input connectors

IN 1	Temperature sensor 1
IN 2	Temperature sensor 2
IN 3	Temperature sensor 3
IN 4	Temperature sensor 4
GND	

Analog input connectors

IN 1	Temperature sensor 5
IN 2	Humidity sensor
GND	

Analog outputs

Out 1	
Out 2	
GND	

Relay connections



Relay connections

Relay 1	ALARM_RELAY
Relay 2	FAN 1 RELAY
Relay 3	FAN 2 RELAY
Relay 4	FAN 3 RELAY
Relay 5	FAN 4 RELAY
Relay 6	FAN 5 RELAY
Relay 7	FAN 6 RELAY
Relay 8	FAN 7 RELAY
Relay 9	FAN 8 RELAY
Relay 10	COOL_RELAY

Hidden function list

Hidden Functions are functions are not found on the front panel function list and can be seen only after they are unlocked.

To unlock hidden function, follow these steps:

- A. Go to the time function (function 01)
- B. Push on “PROG”
- C. Enter “3331” and then press “Enter”.

Now the hidden functions will be unlocked and can be accessed.

<u>/* 49 */ LockCode</u>
<u>/* 50 */ Navr</u>
<u>/* 51 */ NetName</u>
<u>/* 52 */ Dig inputs</u>
<u>/* 53 */ Feed Mode // 0 - feed count by time 1 - feed count by pulse</u>
<u>/* 54 */ Fan Mode // 0 - min fan cirulats from fan1 fan2 etc.</u>
<u>/* 55 */ Cool mode</u>
<u>/* 56 */ Protocol</u>
<u>/* 57 */ Version</u>